



Marlboro Grand Rental

## **HOT DOG GRILL: OPERATING INSTRUCTIONS**

1. Plug the machine into a properly grounded 120 volt power supply.
2. Load the roller grill with the desired amount of hotdogs by placing the hotdogs on the rollers (up to 18). The front 6 rollers are controlled by the left thermostat and the back 5 rollers are controlled by the right thermostat.
3. You can adjust the temperature of the front rollers and rear rollers so that you can either "cook" (higher setting) or "hold" (lower setting) on either set of rollers. It is most common to cook on the rear rollers and hold on the front.
4. Turn on the "On/Off Switches" and set the thermostats to the desired settings for cooking or holding. The rollers will begin to rotate when the switch is activated and the thermostats will now be active. The thermostats will not produce heat unless the Roller Switch is on.
5. A normal size hotdog should be completely cooked in about 10-15 minutes. Cook time will be slightly longer for larger hotdogs.
6. Once the hotdogs have been cooked you can either adjust the thermostat to a lower setting to hold at serving temperature or move them from the "cooking" rollers to the "holding" rollers. This will prevent the hotdogs from over-cooking.
7. When you are done using the machine make sure to turn off the Power On/Off switches. Unplug Hot Dog Grill from power source. Wait for the rollers to cool to the touch and then wipe off rollers, drip tray and housing with a damp sponge or paper towel.

**Do NOT use any chemical cleaners on Hot Dog Grill.**

**Do NOT immerse Hot Dog Grill in water!**

**CAUTION:** Use tongs to remove hotdogs from the grill as the product and rollers will be hot to the touch.

**CAUTION:** Do not let children under 18 self serve.

**CAUTION:** Do not leave unattended while cooking.

**Must be on a dedicated outlet due to high power requirements.**

**WARNING ELECTRICAL SHOCK HAZARD. FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.**

- 1. Electrical ground is required on this appliance.**
- 2. Do not modify the power supply cord plug. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.**
- 3. Do not use an extension cord with this appliance.**
- 4. Check with a qualified electrician if you are in doubt as to whether the appliance is properly grounded.**

#### **SAFETY INSTRUCTIONS**

- 1. Plug electrical cord into a certified electrical outlet with a corresponding voltage rating as listed on the machine model labels.**
- 2. Always unplug the electric cord when appliance is not in use and before cleaning, adjusting or maintaining this steamer. Do not operate with a damaged cord or plug or after the machine malfunctions, has been dropped or damaged. Use authorized service for examination, electrical or mechanical adjustment or repair.**
- 3 This equipment will be HOT during use and for a short time after it is turned off BE CAREFUL. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this appliance. Keep combustible materials away from appliance.**
- 4. Extreme caution is necessary when any appliance is used by or near children and whenever the appliance is left operating and unattended.**
- 5. This appliance is not intended for use in wet locations. Never locate appliance where it may fall into a water container. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electrical shock, fire or damage to the appliance.**

#### **CLEANING SAFETY INSTRUCTION**

- 1. Turn control off and unplug the power cord. Avoid splashing water onto control.**
- 2. Do not clean this appliance with a water jet or immerse in water or other liquid.**